

## **DIAGNOSTIC CODES FOR PTAC/PTHP ELECTRONIC CONTROL**

The indicator blink codes on the power board will repeat approximately every 5 seconds with a delay between bursts. Blink codes and error codes are as follows.

### PTAC Diagnostic Codes

#### LED Blinks Display Code Status

- |    |   |
|----|---|
| 1  | No Err Normal – no errors detected  |
| 2  | E2 Indoor Air Temperature Probe failure   |
| 3  | E3 Outdoor Air Temperature Probe failure  |
| 4  | E4 Communications failure   |
| 5  | E5 Keypad failure (key stuck)   |
| 6  | E6 Remote thermostat input failure  |
| 7  | E7 Linesync timing failure  |
| 8  | E8 Outdoor Coil switch open (only if heat pump configured). Denotes disabled compressor operation.      |
| 9  | E9 Hydronic switch open (if hydronic configured).   |
| 10 | E10 Configuration read failure – internal   |
| 11 | E11 Module mismatch error (power board connected to incompatible model / revision level display board). |