PREPARING SLEEVE TO ACCEPT 16 SERIES UNITS

STEP ONE: SLIDE WALL SLEEVE CHASSIS SUPPORTS INTO SLEEVE SLOTTED END TO FRONT

STEP TWO: TAKE WALL SLEEVE BOTTOM SEAL AND PLACE IT INTO SLEEVE ALIGNING FRONT FLANGE (FLANGE WITH HOLES) WITH BACK OF ROOM AIR OPENING. THE BACK FLANGE OF THE BOTTOM SEAL WILL SLIDE INTO THE SLOTS CUT OUT OF THE CHASSIS SUPPORTS.

STEP THREE: USING THE BOTTOM SEAL HOLES AS A GUIDE DRILL 2 - 1/8" HOLES TO SECURE THE BOTTOM SEAL TO THE SLEEVE.

STEP FOUR: REMOVE BOTTOM SEAL AND APPLY A GENEROUS BEAD OF CALKING TO THE BOTTOM SIDE OF THE FRONT FLANGE. PLACE THE BOTTOM SEAL BACK INTO POSITION AND SECURE WITH TWO SCREWS PROVIDED.

THE ROOM SLEEVE IS NOW READY TO ACCEPT THE MODIFIED 16 SERIES UNIT.

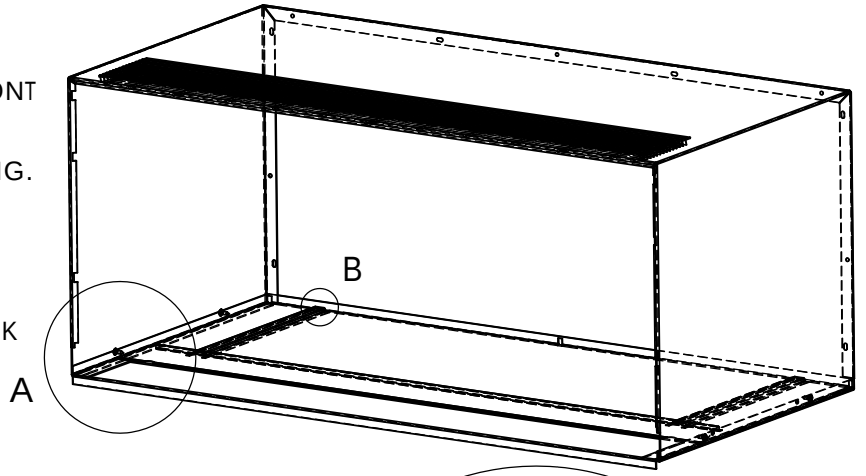

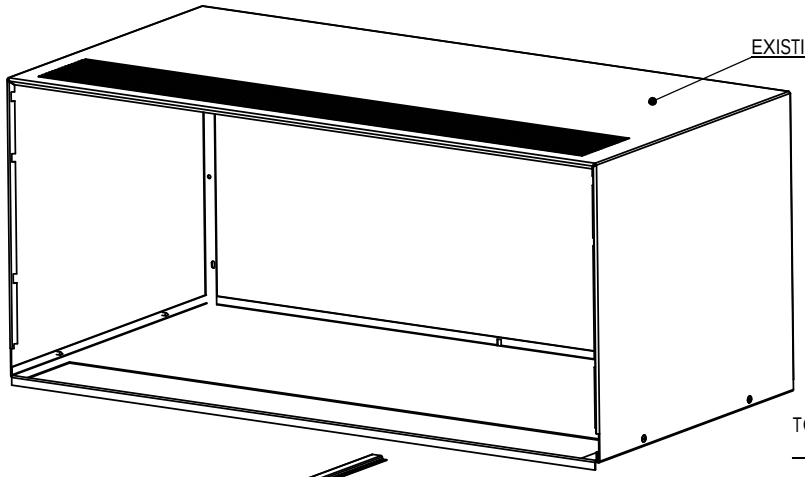

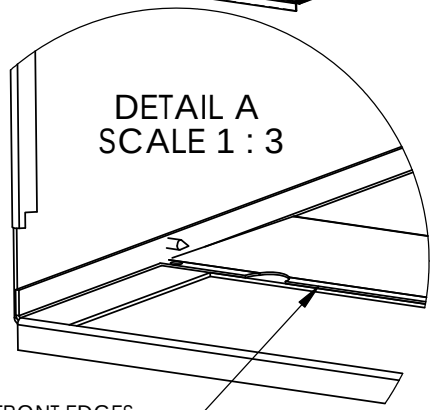

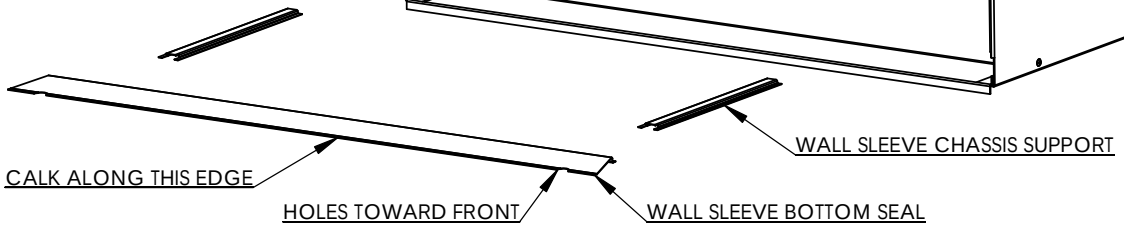

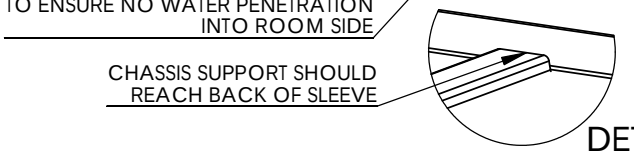

DETAIL B
SCALE 1 : 2

REV	DATE	NOTES	BY

APPLICATION

DO NOT SCALE DRAWING

	NAME	DATE
DRAWN	WWebber	13 Jun 2013
CHECKED		
ENG APPR.		
MFG APPR.		
Q.A.		

MATERIAL

FINISH

COMMENTS:

Applied COMFORT

TITLE: WALL SLEEVE MODIFICATION DRAWING

SIZE	DWG. NO.	REV
G	803198	00

SCALE: 1:10 | WEIGHT: | SHEET 1 OF 1

PROPRIETARY AND CONFIDENTIAL

THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF <INSERT COMPANY NAME HERE>. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF <INSERT COMPANY NAME HERE> IS PROHIBITED.

5 4 3 2 1